GASTROBACK®

Operating Instructions

Electric Sausage Cutter Automatic

Art.-Nr. 41404 Electric Sausage Cutter Automatic

Read all provided instructions before first usage!
Model and attachments are subject to change!

Carefully read all provided instructions before you start running the appliance and pay regard to the warnings mentioned in these instructions.

Content

Features of your Electric Sausage Cutter Automatic	15
Important instructions	16
Important safeguards	16
Safeguards for daily operation	16
Important safeguards for all electrical appliance	18
Moving parts - Risks of injury to persons	18
Operation	18
Care and cleaning	19
Cutting with adjuster	21
Storage	21
Notes for disposal	21
Waste disposal	22
Warranty	23

Features of your Electric Sausage Cutter Automatic

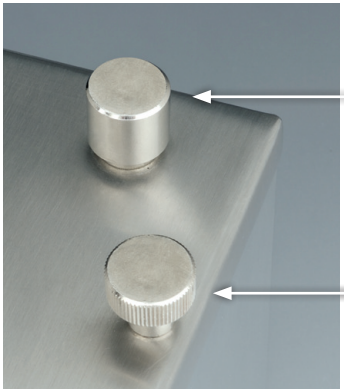

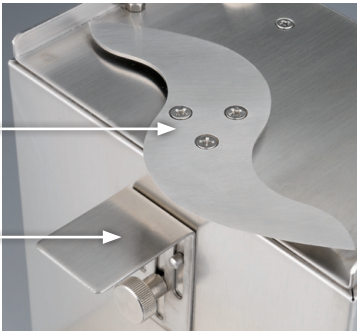

Important instructions

Always IMMEDIATELY unplug the appliance after use and before assembling or dismantling the blending tool and before laying down the appliance. Always ensure that the appliance is assembled correctly before connecting the appliance to the mains power supply.

The appliance has a safety device which ensures that the motor is unable to operate if the appliance is not correctly assembled.

The blade of the Sausage Cutter is extremely sharp. Do not touch the blade. Always ensure, that the nut on top of the blade is tightened.

When reconnecting the feed chute always ensure that the feed chute does not block the movement of the blade. The feed chute should be located approximately 1 mm above the blade.

Do not cut extremely hard food, such as bones or alike.

Do not place the motorblock or power cord in an automatic dishwasher!

The Electric Sausage Cutter Automatic is designed for the efficient cutting of sausages.

Important safeguards

Carefully read all instructions before operating and save the instructions for future reference. Do not attempt to use this appliance for any other than the intended use, as described in these instructions. Any other use, especially misuse, can cause severe injuries or damage by electric shock, fire or moving mechanical parts.
Any operation, repair and technical maintenance of the appliance or any part of it other than described in these instructions may only be performed at an authorised service centre. Please contact your vendor.

Safeguards for daily operation

• Do not operate or store the appliance outdoors or in damp or wet areas. Do not operate the appliance in continuous operation to avoid overheating. If processing large quantities of food, regularly interrupt the operation and unplug the appliance for a few minutes, allow the motor cool down.

• This appliance is not intented for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
• Do not attempt to operate the appliance using any parts or accessories not recommended by the manufacturer (i.e. blending tool). Do not operate the appliance, when the appliance or any part of it is likely to be damaged, to avoid risk of fire, electric shock or any other damage or injuries to persons. Do not attempt to open the

motor housing or to repair the power cord. Check the entire appliance regularly for proper operation. The appliance is likely to be damaged if the appliance is subject to inadmissible strain (i.e. overheating, mechanical or electric shock) or if there are any cracks, excessively frayed parts, distortions or the gear stalls or sticks. In this case, immediately unplug the appliance and return the entire appliance (including all parts and accessories) to an authorised service centre for examination and repair.

• Always IMMEDIATELY unplug the appliance after use and before assembling or dismantling. Always ensure, that the appliance is assembled correctly before connecting the appliance to the mains power supply. Always handle the entire appliance and the tools with care and without violence.

• Do not lift, pull or carry the appliance by the power cord. To move or operate the appliance, always hold on to the motorblock.

• Before use, always make sure that the appliance is properly and completely assembled (see Operation). Do not leave any food to dry on the surfaces of the appliance.

• Close supervision is necessary when the appliance is used near young children. Do not let young children play with any parts of the appliance or the packing. The appliance is NOT intended for use by children or infirm persons without supervision. Take care that no one pulls the appliance by the power cord, especially when young children are near. Place the appliance on a clean, dry and stable surface where it is protected from inadmissible strain (i.e. mechanical or electric shock, overheating, frost, moisture) and where young children cannot reach it.

• Operate the appliance on a well accessible, stable, level, dry, and suitable surface. Do not place the appliance or any part of it on or near hot surfaces (heater, gas burner, grill or oven). Do not place the appliance near the edge of the surface or on inclined or touching wet surface or where it can fall.

• Do not immerse the motor housing or power cord in water or any other liquid. Do not pour or drip any liquids on the motorblock or power cord. When liquids are spilled on the appliance, immediately unplug the appliance and dry it to avoid risk of electric shock or fire. Do not attempt to operate the appliance, when liquids are on or in the motor housing. With the appliance connected to the power supply, do not touch the appliance with wet hands or when the appliance is damp or wet or is touching wet surfaces in order to avoid risk of electric shock. In this case do not touch the appliance but immediately unplug the power cord from the power supply and dry the appliance (see Care and Cleaning).

• Do not place the motorblock or power cord in an automatic dishwasher!

• To avoid damage, do not use any abrasive cleaners, corrosive chemicals (i.e. disinfectants, bleach) or cleaning pads for operation or cleaning. Do not use any hard or sharp utensils for operation or cleaning.

• The appliance is intended for cutting sausages. Do not use the appliance for any other purpose.

Important safeguards for all electrical appliances

• Ensure that the voltage rating of your mains power supply corresponds to the voltage requirements of the appliance (220/230 V, 50 Hz, AC). Always connect the appliance directly to a mains power supply wall socket with protective conductor (earth) connected properly. The installation of a residual current safety switch with a maximum rated residual operating current of 30 mA in the supplying electrical circuit is strongly recommended. If in doubt, contact your local electrician for further information. Do not use multiple electrical adapters.

• Do not leave the appliance unattended while connected to the power supply. Always turn the appliance off and IMMEDIATELY unplug the appliance after operation and if it is not in use and before cleaning and/or assembling or dismantling. Always grasp the plug to disconnect the appliance from the power outlet.

• Always handle the power cord with care. Do not pull or strain the power cord. The power cord may never be knotted or squeezed. Do not let the power cord hang over the edge of the table or counter. Take care not to entangle in the power cord.

Moving parts – Risks of injury to persons

• Do not touch the blade with your hands or any other objects (hair, clothes, brushes, cooking utensils), when the appliance is connected to the power supply. Always turn the appliance off, unplug the appliance and wait for the motor to stop, before assembling or dismantling or cleaning the appliance. Always place the appliance on a stable, level and dry surface, where it can not wobble. Always IMMEDIATELY unplug the appliance after operation.

• The blade is extremely sharp. Do not touch the blade. Always handle the blade of the appliance with care and without violence to avoid injuries to persons and damage. Always ensure, that the appliance is assembled correctly, before connecting the appliance to the mains power supply. **ATTENTION:** Always ensure that the nut on top of the blade is tightened before using the appliance.

Operation

Before first use

Remove all promotional materials and packing. Before first use and after a long period of storage, clean the appliance with a damp soft cloth and warm soapy water (see Care and Cleaning). Before first use you have to remove the blade for cleaning. WARNING: The blade is very sharp. Do not touch the blades. Always handle the blade with care. We recommend to use warm soapy water or you put the blade into the dishwasher.

Usage

WARNING: Operate the appliance on a well accessible, stable, level, dry, and suitable surface. Do not place any tissues or towels underneath the appliance to avoid risk of electric shock or fire. Before use and before connecting the appliance to the power outlet, always make sure that the appliance is properly and completely assembled.

- Place a plate on the bottom panel underneath the ejection port, so it touches the automatic button.
- The device is engaged via the automatic button and is now ready for operation.
- Insert the sausage into the funnel tube using an appropriate pair of kitchen tongs. The sliced sausage slides through the ejection port directly on to the plate.
- You may as well operate the device using the ON/OFF button. Simple insert the sau sage into the funnel tube an keep the ON/OFF button pressed until the the sausage is cut into slices and ready to be served.

WARNING: Do not operate the device at any time, in case fluids are on top or penetrated the device. In order to avoid injuries caused by electrical current, fire an/or damage of the device, do not touch the device in this case, and just disconnect the device from the power outlet immediately (Pull the power plug!).

Disconnect the device from the power outlet (Pull the power plug!), when it is not in use.

Care and cleaning

NOTE: For commercial use you are bound to clean the appliance at the end of each day to avoid food poisoning.

WARNING: To avoid injuries to persons and damage, always release the On/Off button, wait for the motor to stop completely and unplug the appliance immediately after operation and before dismantling or cleaning the appliance. With the appliance connected to the power supply, do not touch the assembled blade with your hands or any objects. The blade is very sharp! Always handle the blade with care.

DO NOT place the appliance or power cord in an automatic dishwasher. Do not immerse the motor housing or power cord in any liquids or spill any liquids on it. Always wipe off spilled liquids immediately. Do not pour or drip any liquids on the motor housing or power cord. Do not place the appliance on wet or damp surfaces. When liquids are spilled on the motor housing, immediately unplug the appliance and dry the motor housing to avoid risk of electric shock or fire. Always handle with care and without violence especially when assembling or dismantling the blade.

CAUTION: Do not use abrasive cleaners, cleaning pads, corrosive chemicals (disinfectants, bleach) or any sharp or hard objects (i.e. metal scouring pads) for cleaning, as this could damage the surfaces. Carefully clean the appliance with a damp sponge or cloth and warm soapy water. Soak stubborn residues on the blade in warm dish-water for ca. 10 minutes and then remove the residues with a soft washing brush. For your convenience, you can clean the blade in an automatic dishwasher (in the cutlery tray).

1. Release the nuts that are attached to the cover turning them anticlockwise in order to remove the cover. Lift the cover straight across the nuts and then towards your body across the chevron. **CAUTION:** The blade is laying open. Beware not to cut yourself.

2. Wipe the motor housing and power cord with a damp soft cloth. Take care not to spill or drip water or any other liquids on the motor housing.

3. Disassemble the blade and the chevron for cleaning. Release the nut on top of the blade using a combination spanner. Take off the nut and take the blade off the holder.
Take off the nuts of the chevron using a cross spanner. **ATTENTION:** Ensure not to lose the grommets.
Clean the blade, the chevron and the cover with a soft nylon washing brush and warm dish-water. Rinse the parts afterwards thoroughly under running water. Do not touch the blade with your hands to avoid injuries. For your convenience, you can clean the blade, chevron and the cover in an automatic dishwasher. Soak stubborn residues in warm dish-water for ca. 10 minutes before cleaning.

4. Thoroughly dry the motor housing and all parts of the appliance after each cleaning and before assembling the appliance. Leave all parts to dry naturally out of reach of young children.

5. Before assembling the blade make sure that the grommet is laying on the holder underneath the blade. The slanted side of the blade should be facing down when putting it on the holder and on top of the grommet. NOTE: The holder has a recess that is why the blade only fits in a certain position over the holder. Turn the blade until the hole in the blade fits over the recess. Tighten the nut on top of the blade. Ensure that the nut is tightened really well to avoid injury.

6. Place the chevron in your desired cutting width position and tighten the nuts using the cross spanner. **ATTENTION:** Ensure that the grommets are between the nut and the chevron. The position of the chevron defines the width of the slices of the sausages.

7. Place the cover on top of the motorblock. Pay attention to the chevron when doing this. Hold the cover at an angle to lift it over the chevron, then hold it straight to lift it over the nuts on top of the appliance. Tighten the nuts turning them clockwise but NOT too tightly.

8. Polish the surface with a dry towel.

NOTE: If required you can clean the feed chute by dismantling it from the cover. Release the grub nuts which are in the set collar using an allen key (SW 2,5).

ATTENTION: Ensure that the feed chute does not block the movement of the blade when assembling it. The feed chute should be located approximately 1 mm above the blade.

Cutting width adjuster

Take off the cover. Release the nuts that are attached to the cover turning them anticlockwise. Lift the cover straight across the nuts and then towards your body across the chevron.
CAUTION: The blade is laying open. Be aware not to cut yourself.
There is a chevron in the front of the motorblock which is connected to the motorblock with two nuts. The chevron defines the width of the slices. Loosen the nuts of the device cover panel. Carefully remove the cover pannel with the funnel tube.

ATTENTION: Risk of Injury!
The exposed double blade is very sharp. While adjusting, make sure you do not touch the blade of the double sickle knife with your hands or fingers.

The fixing screws for the spacer can be found at the front side. The spacer is the limit stop for the slicing thickness for the slicing thickness of the sausage slices. Loosen the fixing screws and move the spacer, in order to set the desired slicing thickness:

Upward toward th kinfe - the **slicing thickness decreases**
Downward away from the knife - the **slicing thickness increases**

The adjustment of the slicing thickness **H** can be chosen between 5 - 35 mm. After adjusting the thickness, make sure you tighten screws properly. Set the cover panel on top and fix with the knurled nuts. The device is now ready for use.

Storage

Always clean the appliance before storing (see ´Care and Cleaning´).
Ensure to store the appliance where it is clean, dry and safe from frost, direct sunlight and inadmissible strain (mechanical or electric shock, heat, moisture) and where it is out of reach of young children. Place the appliance on a clean and stable surface, where it can not fall. Do not place any hard or heavy objects on the appliance.

Notes for disposal

Dispose of the appliance must be conducted in accordance with the corresponding local regulations and requirements for electrical appliances. Please contact your local disposal company.

Waste disposal

The appliance has to be deposed by the definition of the regional waste disposal of electricalscrap. If necessary get information of the regional waste management enterprise.

Warranty

We guarantee that all our products are free of defects at the time of purchase.
Any demonstrable manufacturing or material defects will be to the exclusion of any further claim and within 2 years after purchasing the appliance free of charge repaired or substituted. There is no Warranty claim of the purchaser if the damage or defect of the appliance is caused by inappropriate treatment, over loading or installation mistakes. The Warranty claim expires if there is any technical interference of a third party without an written agreement.The purchaser must present the sales slip in assertion claims and has to bear all charges of costs and risk of the transport.

Gastroback GmbH
Gewerbestraße 20
D-21279 Hollenstedt/Germany

www.gastroback.de • www.tee.gastroback.de
info@gastroback.de